

TRACTOR PARTS



Axle Hubs



Sensor Tubes



Trumpet End Cover (Mahindra)



Trumpet End Cover (Swaraj)



Clutch Actuator Guides



Inner Bush (Mahindra)



Inner Bushes



Housing



Lubricating Oil Pump (Swaraj)



Balance Weight Pulley



4WD Housing



Bearing Carrier



P.T.O. End Cover



Hyd. Suction Plate



4WD Housing Seal Cover



4WD Housing Cover



Cover Plate

OIL ENGINE PARTS



Cylinder Heads



Gear Set



Lubricating Oil Pump TV-2



Lubricating Oil Pump TV-1



Intermediate Housing TV-2



Main Bearing Housing TV-2



Main Bearing Housing TV-1

COMBINE PARTS



Brake Disc



Disc Variator Pulley



Disc Variator Pulley



Steering Pulley



Reel Pipe Bracket



C A Guide Assembly



Sms Idler 8"



Pump Pulley